

SAMSUNG

Samsung Smart Tvs Parental Controls Guide Controls & settings guide

Learn how to use Samsung's inbuilt Smart TV parental controls to help manage what content your child can access.



1 How to lock apps on Samsung Smart TV

To limit the apps your child can access, Samsung allows you to use locks. Once a lock is set, you must enter your PIN to open it.

To lock apps:

Step 1 – From the Smart TV home menu, select **Apps**.



Step 2 – On the Apps screen, select **Settings**. You can also select Settings from your remote control, Home Menu or with voice control. Alternatively, go to **Parental Settings** > **Settings**.





Step 3 – Select the app you would like to lock. Then select **Lock** on the menu. When prompted, enter the **PIN** you set during installation.

	Settings				Used 2.63GB	Available 1.21GB(31%)
					Auto update :	on 🥥
		den de la la				
		prime video	• v • i	<u>من با کم</u>		
	NEIFLIX	prime video	Voulube	Utv	Public Value	Interr
						đ. d
٢	Added to Home					
		2				
				a de la companya de l		

2 How to change your PIN

Your Smart TV uses a PIN to set and change parental controls. Choose a number that your child won't guess.



To change your PIN:

Step 1 – Open the **Settings** menu either via your remote control, through the Home Menu or with voice control.



Step 2 – Scroll to the right to find All Settings.



Step 3 – Select General & Privacy > System Manager.



Step 4 – Click Change PIN.

	System Manager		Change the PIN you use for Parental Settings or Reset.
r 1a	Time		
42	Language	English	
æ	Samsung Account		
ଞ	Change PIN		
	Usage Mode		
::0			
ß			

Step 5 – Enter your existing PIN. Then enter and confirm your new PIN.

You will now be able to use this new PIN.



Accessing controls for Freeview or Freesat users

If you have an aerial plugged directly into the TV, you can access controls with the following steps.

To access controls:

Step 1 – Select the **Home Button** on your remote control to open the **Home Menu**. Navigate left to the **Media Menu** > **Connected Devices**.



f 🖸 🖸 in



Step 2 – Navigate right to select TV.

Alternatively, from the Home Menu, scroll right along the bar and select **Live TV**.



4 How to set parental controls for Freeview or Freesat

With Freeview or Freesat, you can adjust a range of parental controls to protect your child from inappropriate content.

To set up parental controls:

Step 1 – Select **Settings** on your remote control, with the Home Button or with voice control. Scroll down to **General & Privacy** > **Parental Settings**.



Step 2 – Choose which parental control option you'd like to set up:

App Lock Settings Programme Rating Lock Mark Adult Channels Apply Channel Lock Channel Lock Settings

2	Parental Settings		Block programmes based on their ratings.
-13	Programme Rating Lock	Allow All	
29			
æ	Apply Channel Lock	٢	
ଞ	Channel Lock Settings		
	App Lock Settings		
:::@			Strate States
ß			

5 Manage age-appropriate programmes

You can manage age-appropriate programmes on Samsung Smart TVs with Programme Rating Lock. It is set to Allow All by default. However, you can edit it to

f 🖸 🖸 in



suit your family's needs.

To edit Programme Rating Lock:

Step 1 - From the Parental Settings menu, select Programme Rating Lock and enter your PIN.

Step 2 - Select the appropriate broadcasting rating for your child's age.

Only programmes appropriate for this age and younger will be available. Your service provider is responsible for identifying which content is appropriate according to this.

	Parental Settings			Block programmes based on their ratings.
1 2	Programme Rating Lock	Allow All	⊘,	
44		3		
æ	Apply Channel Lock	4		
ල්ම	Channel Lock Settings	5		
	App Lock Settings	6		
		7		
ß		0	welle.	

6 How to block channels

With Samsung Smart TV parental controls, you can control which channels your child can access with Apply Channel Lock and Channel Lock Settings. Also, you can add channels to Favourite lists to help children find the right channels easily.

Apply Channel Lock is on automatically and requires a PIN to access any locked channels.

To lock channels:

Step 1 – From the **Parental Settings** menu, select **Apply Channel Lock** and enter your **PIN**. This will close the menu and open the channel editor.





Step 2 – Customise your channel list. You can **lock** or **delete** specific channels or add them to **Favourite** lists.

Edit Channels				
		neeview		
	🔳 🔟 101	BBC ONE Lon HD	Select All	
	🔲 🚾 102	BBC TWO HD		
101 BBC ONE Lon HD Channels	🔲 🚥 103	ITV1 HD	Delete	
💕 All Channels	🔲 🔤 104	Channel 4 HD	Lock	
Samsung TV Plus	🔲 🚥 105 Channel 5 HD	Channel 5 HD		
Channel Type	🔲 🚥 106	BBC FOUR HD	Restore Samsung TV Plus	
Favourites	🔲 👓 107	BBC THREE HD		
Favourites 2	201	СВВС		
Favourites 3	202	CBeebies		
C Favourites 4	203 203	CITV		
Favourites 5	204	CBBC HD	Save and Evit	
	205	C Poshies UD	Save and Exit	

Step 3 – You must enter your **PIN** to make changes. Select **Save and Exit** when done.



Step 4 – If your child tries to access a blocked channel, they must enter a PIN to continue.



7 How to identify adult channels

On Samsung Smart TVs, Mark Adult Channels is always on so all adult channels are already marked. It cannot be disabled per <u>UK/Ofcom Broadcasting rule 1.18</u>.

You can delete these channels through Apply Channel Lock.

NOTE: If a supplier doesn't offer Adult Channels, this control will automatically be





greyed out.